

Nuit Spot Project Series



Nuit 60

Nuit 80

Nuit 100

INSTALLATION GUIDE

Important Note:

This installation guide is intended for reference purposes only. All installations should comply with local laws, regulations, and site-specific conditions. The recommendations provided are general guidelines and may require adjustments based on the actual site situation. Always consult a qualified professional for final installation decisions.

INSTALLATION INSTRUCTIONS

Nuit Spot Project Series

LUMINOSCAPE®

Architectural Lighting Solutions



WARNING:

- This product must be installed according to national and local electrical codes by a qualified individual familiar with the construction, operation, and associated risks.
- Failure to follow the installation instructions may result in serious injury or death.
- Disconnect power before installation or maintenance to avoid electrical shock.
- Do not exceed the rated voltage of the fixture.
- Do not install if the fixture, parts, or connectors are damaged.
- The fixture is rated **IP66** and is suitable for use in outdoor, wet locations.
- Do not submerge in water or other liquids.
- Do not exceed the maximum number of fixtures in any single run. Refer to **Table 1** for details.

CAUTION: Unauthorized modifications or repairs will void the warranty.

ELECTRICAL SPECIFICATIONS FOR NUIT SPOT PROJECT SERIES (Table 1)			
Series	Nuit 60	Nuit 80	Nuit 100
Input Voltage Range	220-240V, 50/60Hz		
Max Power	10W	15W	20W
Power Factor	≥ 0.9		
Max. Power Linking	160 nos.	100 nos.	80 nos.
Max run length is for interlink and leading cables (Fixtures not included)	50 meters	50 meters	50 meters

Remark:

- Please be aware that mounting screws and hex-head bolts are not included with your purchase. Installers will need to supply these items for installation. We recommend using stainless steel screws to prevent corrosion.
- The actual maximum daisy chain limit may vary based on the gauge of the leading cable and the specific installation conditions. The values provided are recommended guidelines and should be considered as such. Please ensure that all installations comply with local electrical codes and safety standards.

INSTALLATION INSTRUCTIONS

Nuit Spot Project Series


LUMINOSCAPE®

Architectural Lighting Solutions

HARDWARE INSTALLATION STEPS


STEP 1) Removing the Bracket:

Loosen the fastening screws with an Allen key to detach the bracket.

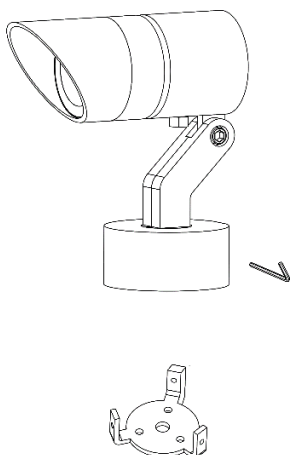


STEP 2) Positioning the Mounting Bracket:

Place the mounting bracket in the desired location and securely fasten it by tightening screws through its holes.

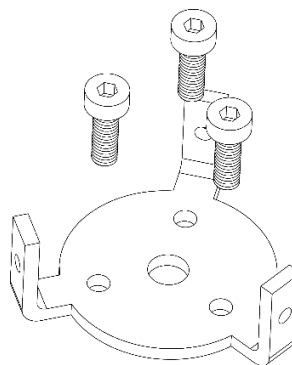


STEP 3) Placing the Fixture Downward:

Put the fixture downward onto the mounting bracket.

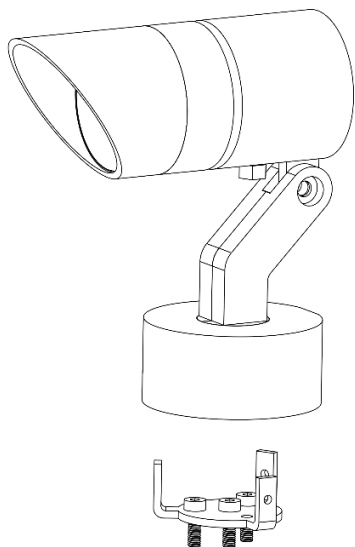

STEP 4) Securing the Mounting Bracket:

Ensure the mounting bracket is securely attached to the fixture by fastening it tightly with the provided screws.

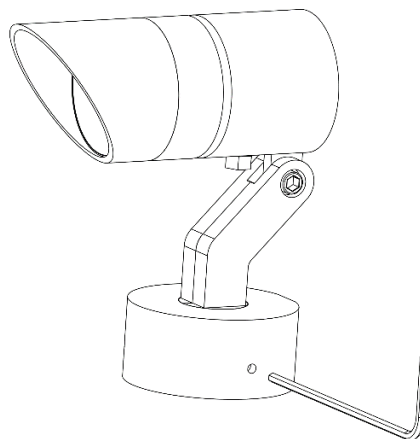

INSTALLATION INSTRUCTIONS

Nuit Spot Project Series


LUMINOSCAPE®

Architectural Lighting Solutions

ADJUSTING THE MOUNTING ARM ANGLE


Vertical Adjustment of the Fixture:

Loosen the hex bolts on the sides with an Allen key to adjust the angle of the mounting arm. Set the fixture to the desired angle, then tighten the hex bolts securely to maintain stability.

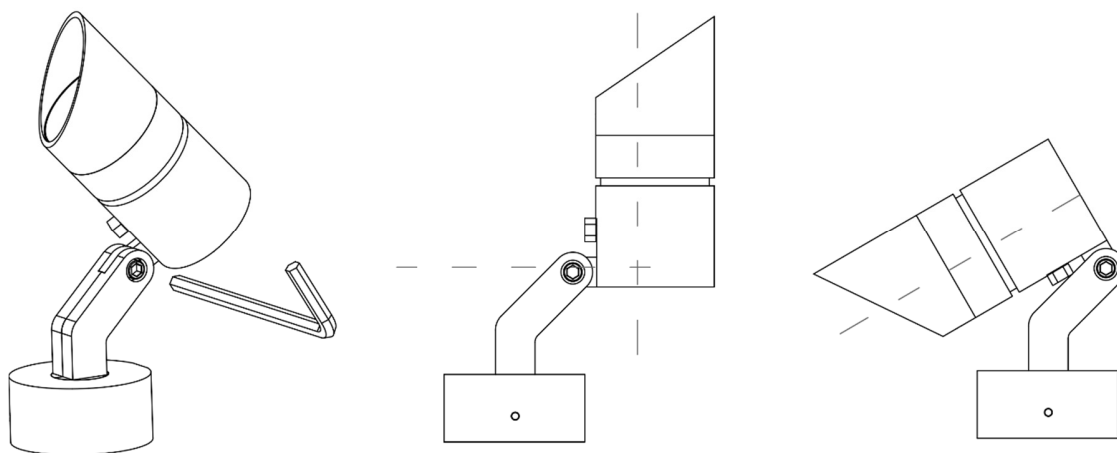

Horizontal Adjustment of the Fixture:

Use an Allen key to loosen the hex bolts on the fixture body to make the necessary adjustments. Adjust the fixture body to the desired angle. After completing the adjustment, tighten the hex bolts securely to ensure stability.

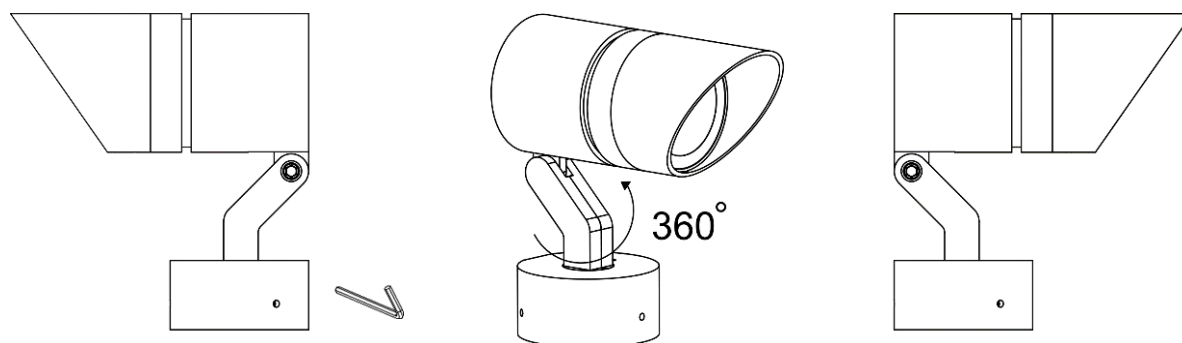

INSTALLATION INSTRUCTIONS

Nuit Spot Project Series

LUMINOSCAPE®

Architectural Lighting Solutions



WARNING:

- Ensure the **Nuit** is properly earthed, and the AC power supply is equipped with a circuit breaker or fuse, ground fault protection, and a device to disconnect power for servicing or when the fixture is not in use.
- Disconnect all cables and the fixture from the power source completely before performing any maintenance tasks.
- Implement measures to prevent the accidental reconnection of power during maintenance.
- Confirm that the voltage and frequency specified on the product label match the local mains power supply before turning on the fixture.

IMPORTANT:

- All **Nuit** models include a pre-installed power cable tail, suitable for direct connection to mains power.
- External connections must be enclosed in waterproof junction boxes or as required by local regulations, laws, or codes.
- Cable ends on **Nuit** fixtures should be kept free from water or moisture, as the cooling process can create a vacuum that may draw moisture along the cable into the fixture.

INSTALLATION INSTRUCTIONS

Nuit Spot Project Series

LUMINOSCAPE®

Architectural Lighting Solutions

POWER CABLES AND CONNECTIONS

Wire Identification Schemes Table:

CABLE	FUNCTION	CORE(EU)	WIRE SIZE
POWER	L (live)	Brown	1.3mm ²
	N (Neutral)	Blue	1.3mm ²
	GND (Earth)	Yellow/Green	1.3mm ²

The outdoor connection point must be connected using IP67 or IP68 connectors (supplied by other vendors) only. Cable protection tape or any other method that may compromise the IP rating is not acceptable.

Recommended IP68 Jelly Connector (Prepare by others)

Item: Paguro 5650/3

Brand: STEAB


Description: GEL Box 2ways waterproof IP68 3 pin connectors

Product Link: <https://www.steab.it/catalogo/paguro-5695-3/?lang=en>



Wiring (ON/OFF) Schematic:

DAISY CHAIN LAYOUT (FIRST OR MIDDLE OF RUN)

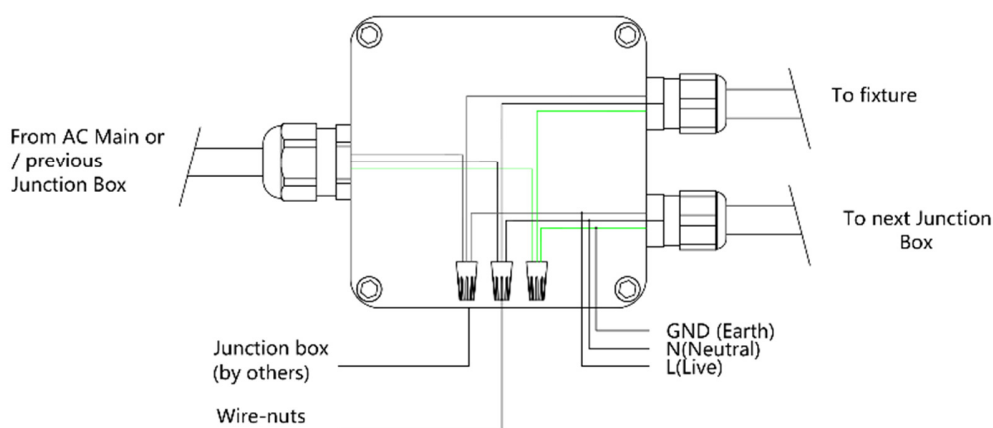

INSTALLATION INSTRUCTIONS


Nuit Spot Project Series

LUMINOSCAPE®

Architectural Lighting Solutions

Connection Schematic:

For daisy chain connections, please follow the illustrated diagram for proper connection. These fixtures are interconnected using a junction box.

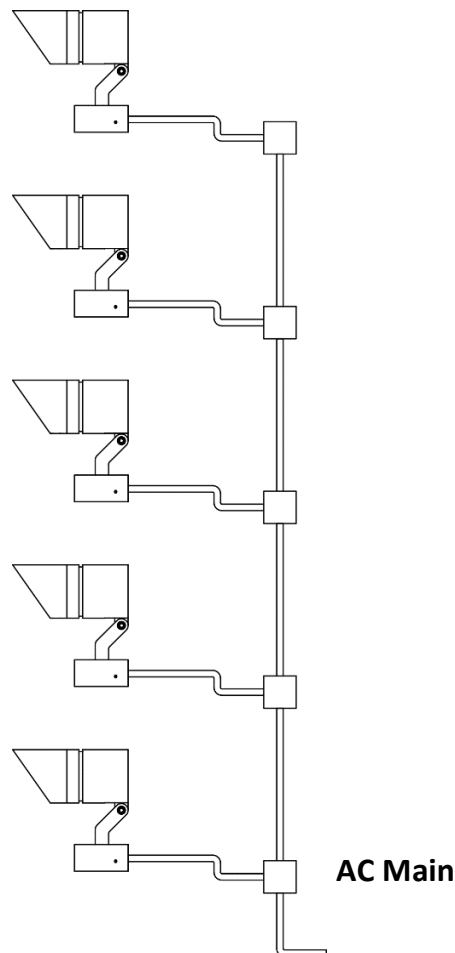

Final Checklist:

- Fixture is securely mounted
- Wiring connections are correct and sealed
- Angles and alignment are set as desired

Warranty:

For detailed warranty information, please consult the datasheet provided at the link below."
https://luminoscape.com/product_cat/spot-projector/

info@luminoscape.com

©2024 Luminoscape Lighting Nuit-SW2404

7 / 7